




OIL WELL PUMP PARTS AND ACCESSORIES

BIG BORE ROD PUMP STATIONARY HEAVY WALL BARREL TOP FRICTION RING HOLD-DOWN RWAFR (see notes)

ITEM	NO. REQ'D.	DESCRIPTION	PART NUMBER		
			TUBING SIZE & PUMP BORE		
			4-1/2" x 3-1/4"	5-1/2" x 3-3/4"	7" x 5-1/2"
			40-325 RWAFR	50-375 RWAFR	65-550 RWAFR
PLUNGER ASSEMBLY					
A	1	Bushing, Valve Rod	23U	23U1	23U1
B	1	Rod, Valve	114Z	114ZY	114ZY
C	1	Coupling, Polished Rod	PR54X1	PR54Y1	PR54Y
D	1	Cage, Top Open	33R1	33T	33ZA
E	1	Valve, Ball & Seat (optional)	12R	12T	12ZA
F	1	Connector, Top Plunger	42R	42T	42ZA
G	1	Plunger, Box End	100R	100T	100ZA
H	1	Cage, Closed, Box End Plunger	40R	40T	40ZA
I	1	Valve, Ball & Seat	12R	12T	12ZA
J	1	Plug, Seat	98R	98T	98ZA
BARREL ASSEMBLY					
K	1	Guide, Valve Rod	70U1	70Z1	70ZA
L	1	Bushing, Top Hold-down	25UR	25ZT	25ZA
M	1	Barrel, RW, Heavy Wall	18R(L)	18T(L)	18ZA(L)
N	1	Closed, Closed Barrel	37TM	37Z	37ZA
O	1	Valve, Ball & Seat	12T	12T	12ZA
P	1	Bushing, Seat, Barrel Cage	22T	22Z	22ZA
HOLD-DOWN ASSEMBLY					
Q	1	Mandrel, Hold-down, 2-Wide Ring	85U1	85Z	85ZA1
R	2	Ring, Friction	112U1	112Z1	112ZA1
S	2	Ring, Spacer	113U1	113Z1	113ZA1
T	1	Nut, Lock	95U1	95Z1	95ZA1
SEATING NIPPLE (not shown in the assembly)					
	1	Nipple, Seating	89U	89Z	89ZA

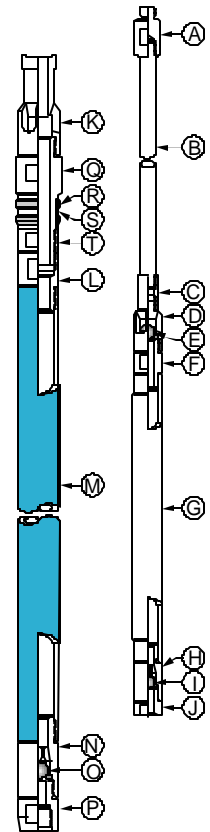

Notes:

- When ordering specify the following:
 - Barrel Length in feet(meters).
 - Nominal Plunger Length in feet(meters) and Clearance(FIT) in thousandths of an inch (hundredths of millimeters).
 - Polished Rod length in feet(meters).
- Component parts listed are for reference only. See parts section for complete part numbers and material availability.